

**MAAX**<sup>®</sup>  
 Enjoy the experience

**Model Names**  
 ARNO 6040 – ARNO 7242

**Cut Out Template for Installation\***

The following procedure is required for correct installation of the Aquatic bath tub. This cut out represents one quarter of the unit.


Step 1: Draw a centerline horizontally and vertically on a 1" (25mm) thick plywood deck.

Step 2: Place template in the upper left hand quadrant, noted as quadrant 1 on the diagram to the right. Trace template to outline quadrant 1.

Step 3: Take the paper cutout and flip over. Make sure to match the dotted centerline on the paper with the centerline on the plywood. Trace again to outline quadrant 2.

Step 4: Repeat step 3 until the other remaining quadrants of the unit have been traced.

\* The dimensions needed for site preparation and structure building should be measured from the bath tub. Aquatic assumes no responsibility for incorrect installation.

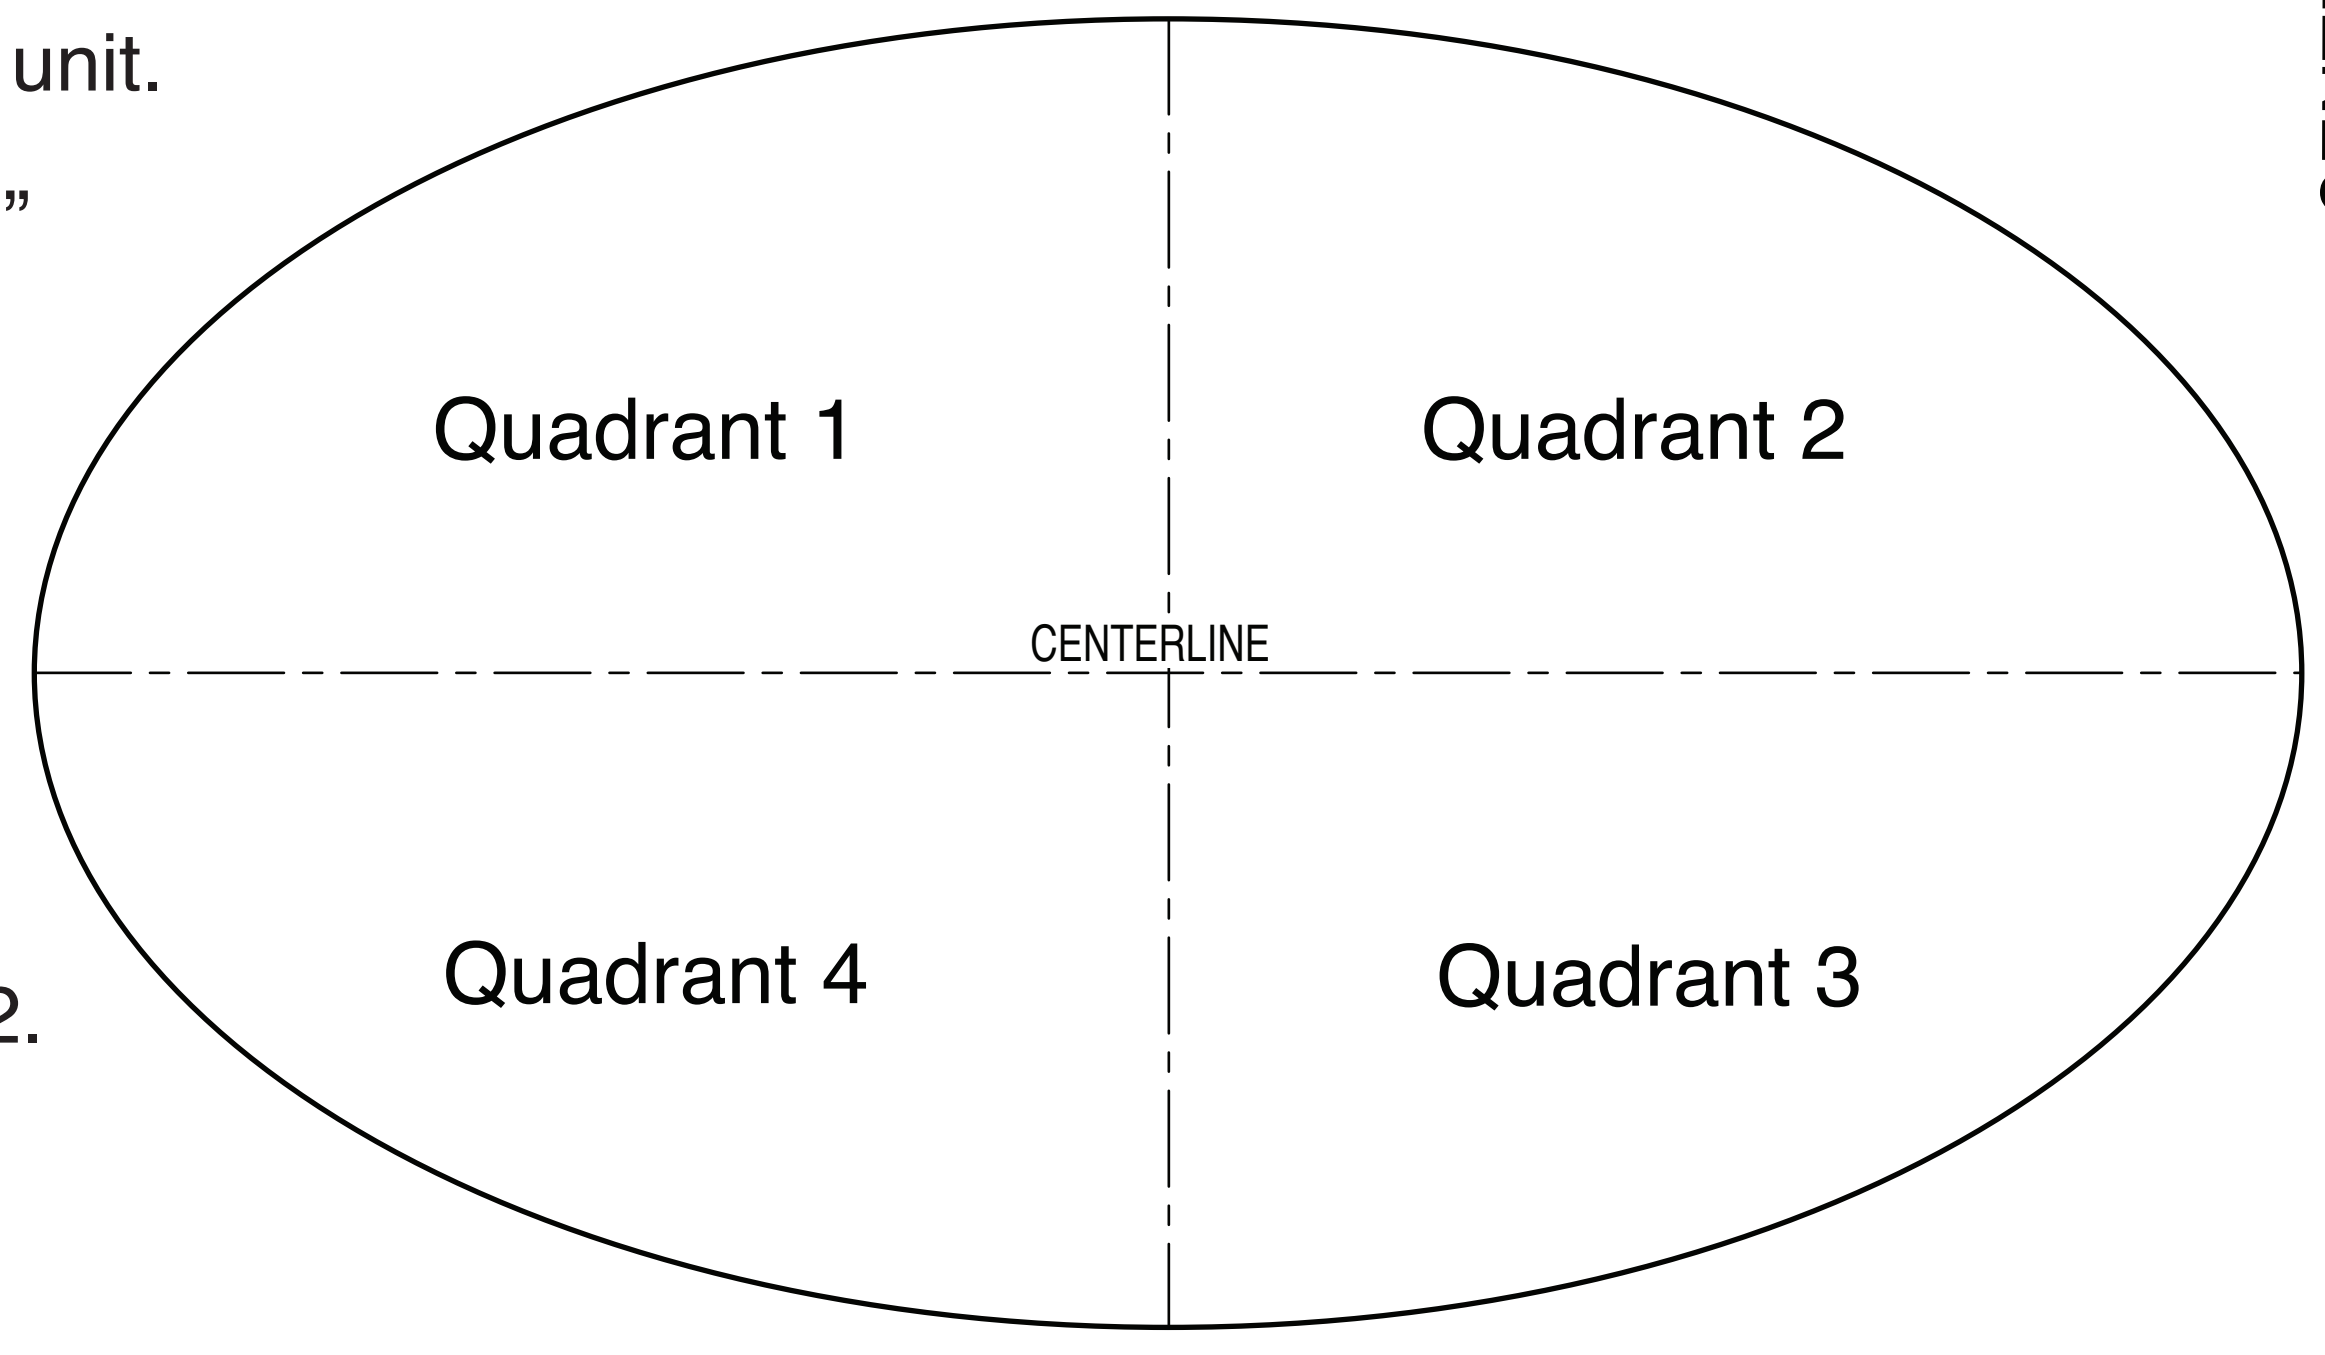

Part Number: **8TEMPARNO**